

## **FLOATING GEAR HUB INSTRUCTIONS**

### **Instructions For Use**

- The PRC Floating Gear Hub comes completely assembled and ready to race.
- Install the gear hub and align it with both the chain and clutch gear.
- Be sure to secure the sprocket to the keyway using the supplied set screw.

### **Instructions For Proper Care**

Cleaning the PRC Floating Gear Hub does not need excessive maintenance. During race weekends, simply wipe the dirt away from the hub, especially in and around the rubber seals. There is no need to disassemble the hub at the race track.

For cleaning purposes, we recommend not using brake cleaner or carburetor cleaner on the hub. This will damage the seals allowing for dirt and grime to enter the inside of the hub. Simply wipe the dirt away using a clean cloth.

### **Instructions For Maintenance**

We highly recommend that each week, as part of your weekly maintenance, you check both the set screw and all three small allen screws to ensure they are tight and secure. We do not recommend disassembling the hub for any reason, without contacting us first.

